

— About the Breadboard

We use 868 circuit board: the same circuit board can be applied to a variety of series of electric screen.

— About Wiring (220V)

Blue - Stop / Common line
Black - Up
Brown - Down
Yellow - Ground wire

— About Surface

Q: On the surface of the fabric, If unfortunately, there is a stranger's (or maybe your pet) fingerprints.

A: Please wipe off with alcohol.

Q: What if there's dirt?

A: Please gently wipe off with white towel, please note that if produce the graze spot, the damage can not be repaired.

Q: What if the screen has ink?

A: Please wiping with white gas, you can get it at hardware store (when you do please wear gloves).

—What if the Curtain Falls Down and Doesn't Rise?

Step 1: Make sure that the screen outlet is properly connected.

Step 2: Check whether the remote control / central control box indicator is flashing, if not, jump to Step 4.

Method: See if remote control battery has run down needs recharging, is the central control connected to the power supply.

Step 3: When operating the motor if there are noises (cracking sounds), if there is:

Methods: The problem of the limiter and the replacement of the motor.

Step 4: If not:

Methods: PCB problem. Give us a call, we would be happy to provide the replacement components in the warranty period.

—Transport

The order of time is (fast to slow): Express delivery, Air freight, Sea transportation.

